ASSEMBLY **INSTRUCTIONS:** TUBE LEGS

The assembly of the table to be made in accordance with these instructions. Changes to the table frame or improper use may affect the safety, function, and life of your product.

These instructions are for installation of the following products: Tube Leg: C Configuration, Tube Leg: T Configuration

USING TABLE 1 AND FIGURE 1, MARK THE POSITION OF THE CORNER HOLE

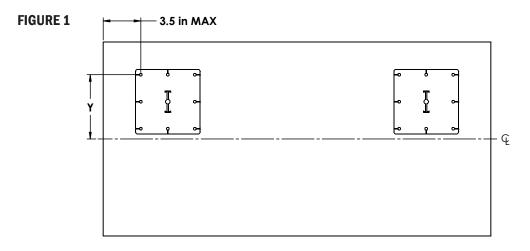


TABLE 1: Y DIMENSION (SEE FIGURE 1)

			WORKSURFACE DEPTH (IN)									
			18 IN	20 IN	22 IN	24 IN	26 IN	28 IN	30 IN	32 IN	34 IN	36 IN
NOMINAL FOOT SIZE	C LEG	18 IN	5.95	5.95								
		22 IN			5.62	5.62						
		26 IN					7.62	7.62	7.62			
		32 IN								12.63	12.63	12.63
	T LEG	18 IN	2.5	2.5								
		22 IN			2.5	2.5						
		26 IN					2.5	2.5	2.5			
		32 IN								2.5	2.5	2.5

MARK THE REMAINDER OF THE HOLES USING THE TEMPLATE 2 ON THE FOLLOWING PAGE. (FIGURE 2)

FIGURE 2: TEMPLATE

